


Cladding Systems For Technical Insulations



Again and again

PVC formparts are exposed to the heat, mostly in the summer months.

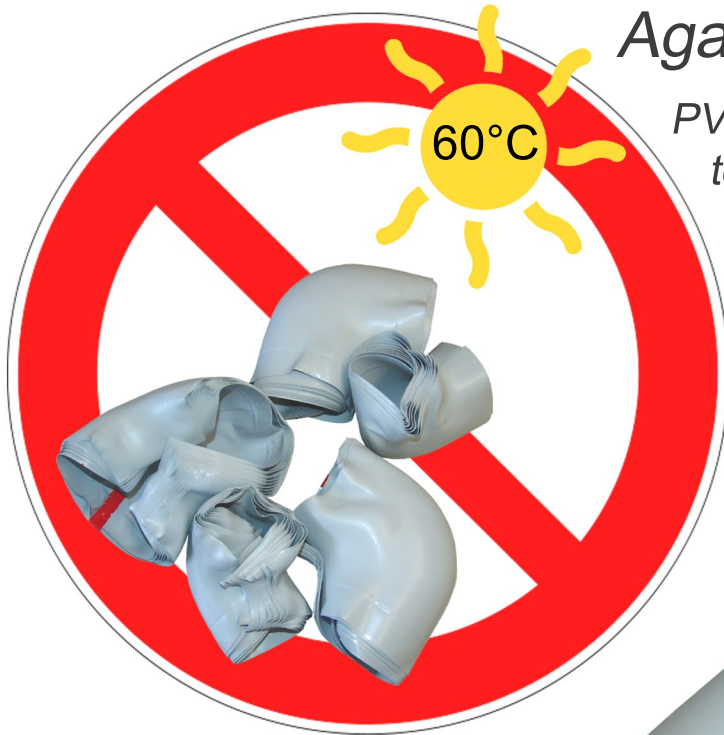

To prevent deformation, please note the following:

- *PVC starts to soften from 60°C.*
- *Storage temperature should be between 10 and 25°C,*
- *Refrain from leaving the parts in vehicles, under intense sun exposure where no air movement is present, as temperatures can become excessive, especially in summer*
- *Do not store the parts in any confined space, where temperatures become excessive*

Please contact the manufacturer for more information

Sebald Iso-Systeme GmbH & Co KG

Bahnhofstr 40 · 93161 Sinzing · Germany · Phone +49 941 30727 0 · Fax +49 941 30727 40 · info@isosysteme.de · www.isosysteme.de

